



Basic Controls

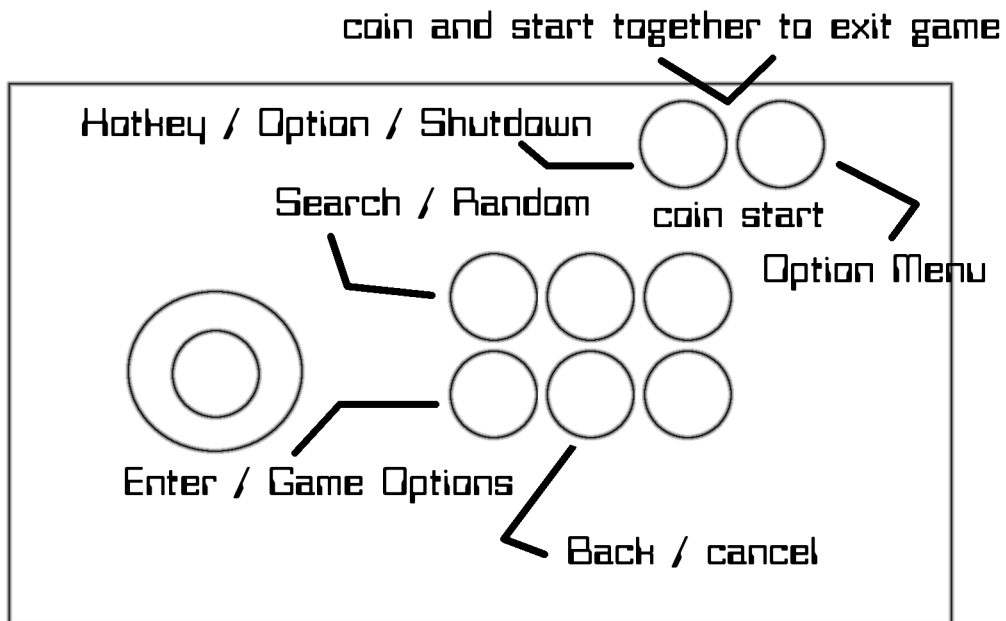


Controls As They Are Mapped

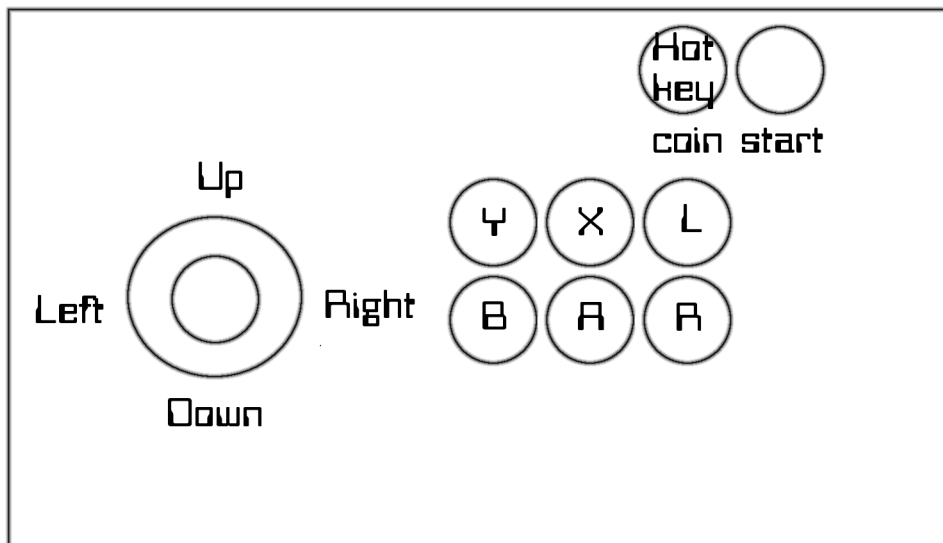

How To Fix Controls

If your controls get messed up follow the instructions

Hit start at main menu. Go to Controls & Bluetooth settings

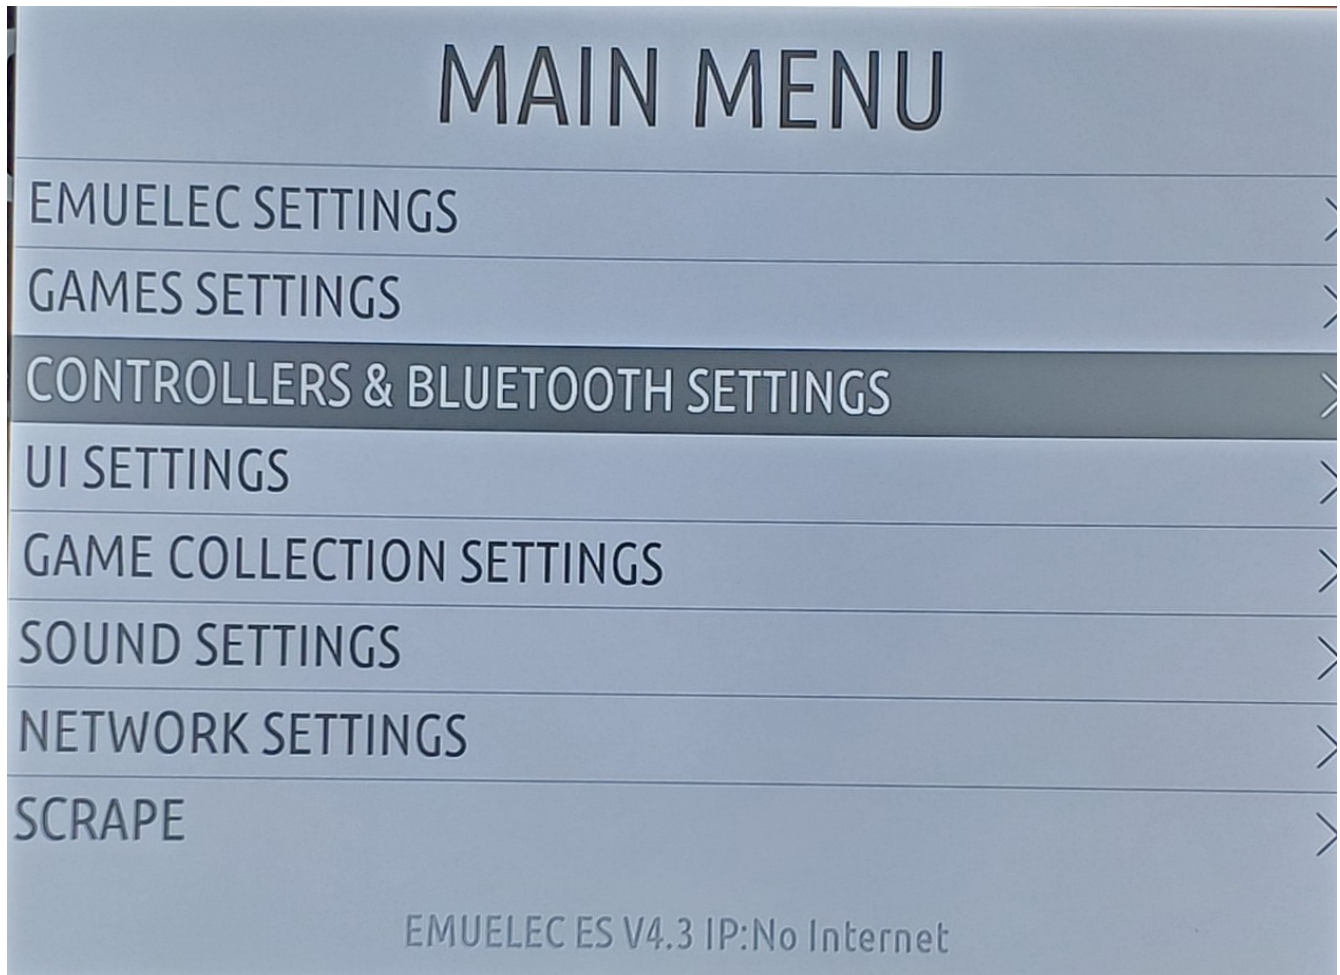

Then configure a controller

CONTROLLERS & BLUETOOTH ...

CONFIGURE A CONTROLLER

PAIR A BLUETOOTH DEVICE

FORGET A BLUETOOTH DEVICE

INPUT P1 < DEFAULT >

INPUT P2 < DEFAULT >

INPUT P3 < DEFAULT >

INPUT P4 < DEFAULT >

INPUT P5 < DEFAULT >

BACK

Read the onscreen instructions. Make sure you assign a hotkey (select button is recommended) skip any buttons you can not map by holding down a button already mapped.

CONTROLLERS & BLUETOOTH

YOU ARE GOING TO CONFIGURE A CONTROLLER. IF YOU HAVE ONLY ONE JOYSTICK, CONFIGURE THE DIRECTIONS KEYS AND SKIP JOYSTICK CONFIG BY HOLDING A BUTTON. IF **i** YOU DO NOT HAVE A SPECIAL KEY FOR HOTKEY, CHOOSE THE SELECT BUTTON. SKIP ALL BUTTONS YOU DO NOT HAVE BY HOLDING A KEY. BUTTONS NAMES ARE BASED ON THE SNES CONTROLLER.

OK

BACK


When you see the configure input screen hold down any button to the controller you want to map controls to. (You may need to plug in a USB controller to get to this screen. Hold down button to controller needed mapped)

CONFIGURE INPUT

1 GAMEPAD DETECTED

HOLD A BUTTON ON YOUR DEVICE TO CONFIGURE IT.

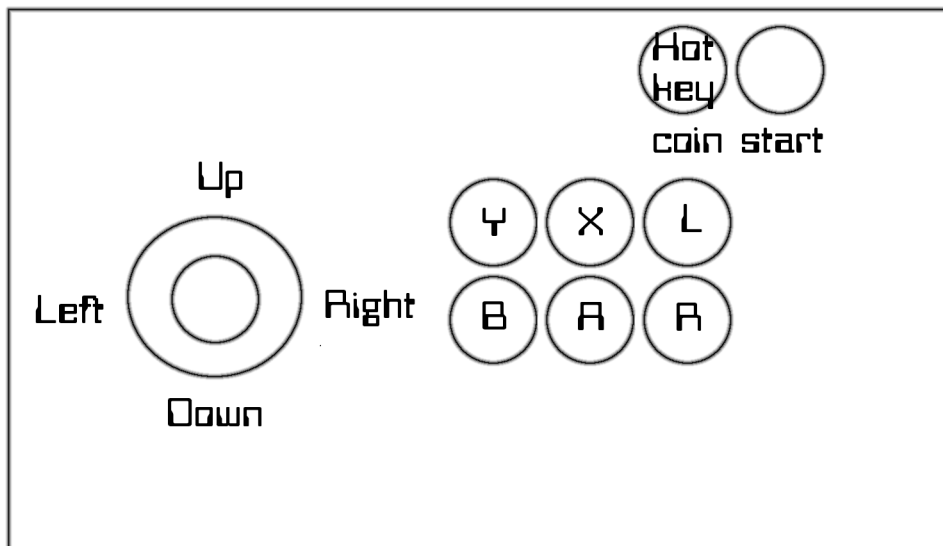





Map the controls to the way they are in the diagram



CONFIGURING

GAMEPAD 2

    HOLD ANY BUTTON TO SKIP


 D-PAD UP	PRESS ANYTHING
 D-PAD DOWN	-NOT DEFINED-
 D-PAD LEFT	-NOT DEFINED-
 D-PAD RIGHT	-NOT DEFINED-
 START	-NOT DEFINED-
 SELECT	-NOT DEFINED-

OK

How To Enable Hiash Mode

Entering hiash mode

Hit start at main menu. Go to System Settings

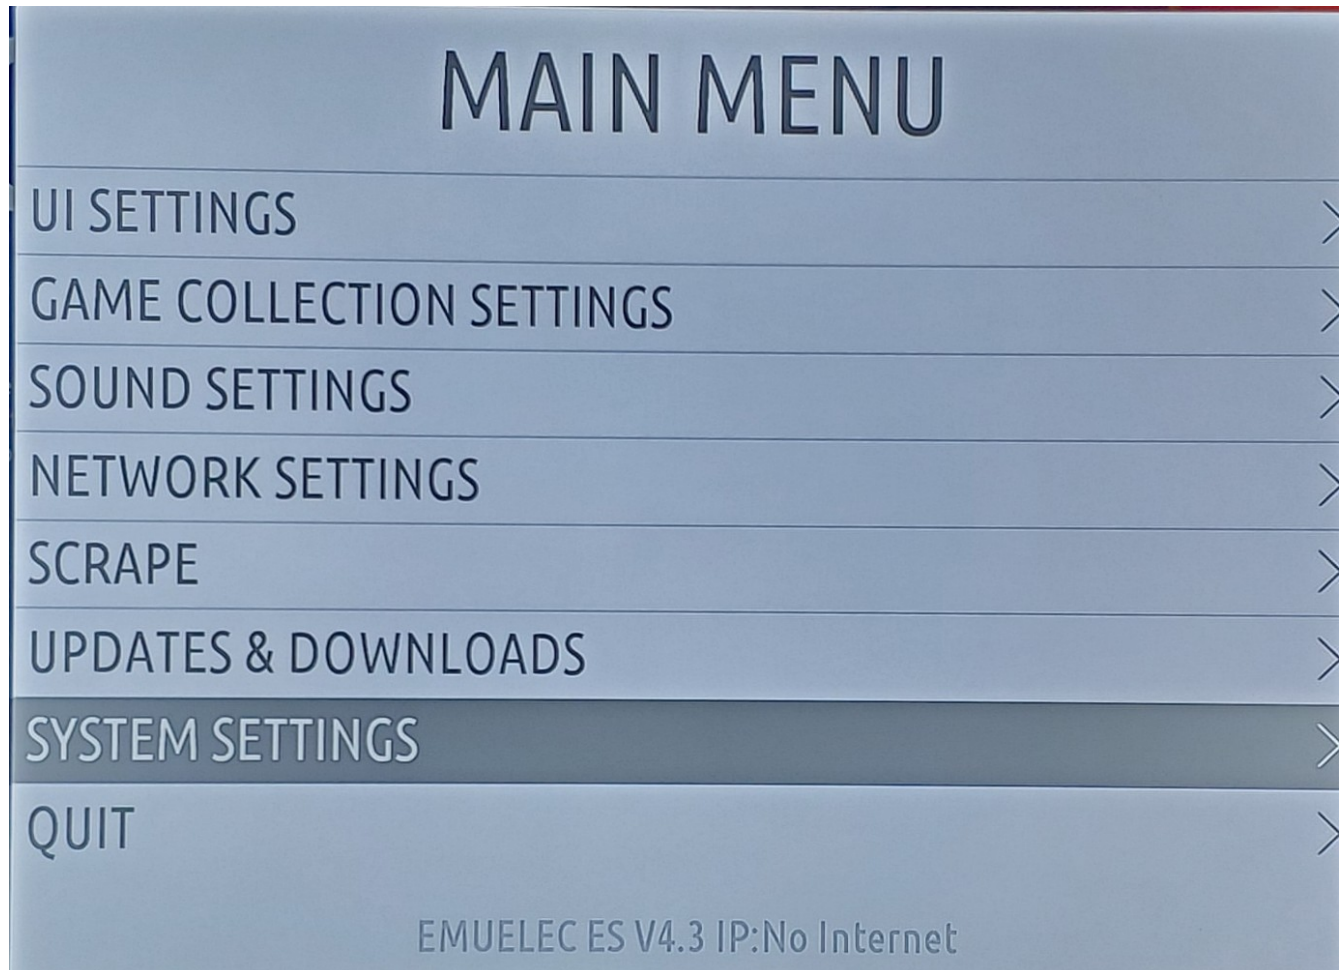

Then go to UI Mode

SYSTEM SETTINGS

- INFORMATION >
- TIMEZONE ◀ AMERICA/MEXICO_CITY ▶
- LANGUAGE ◀ ENGLISH ▶
- SHOW CLOCK IN 12-HOUR FORMAT
- POWER SAVER MODES ◀ DEFAULT ▶
- UI MODE ◀ FULL ▶
- DEVELOPER >

BACK


Then select kiosk mode

UI MODE

- FULL
- KIOSK
- KID


BACK

It will give you a button combination to enter so you can disable kiosk mode if needed

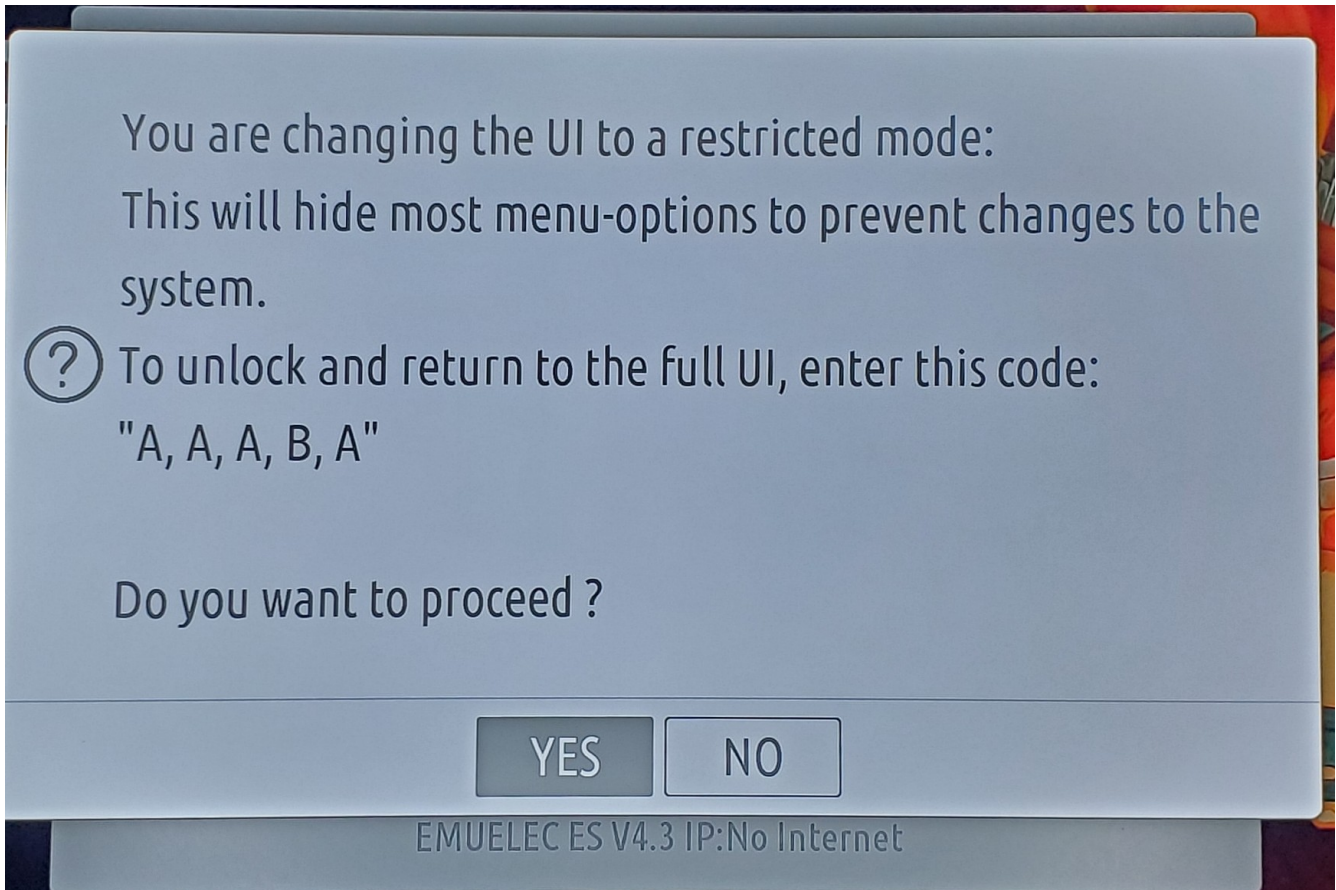

Remember button combination to unlock kiosk mode

To unlock kiosk mode go to unlock UI Mode and enter the button combination A,A,A,B,A and it will unlock and go back into full mode

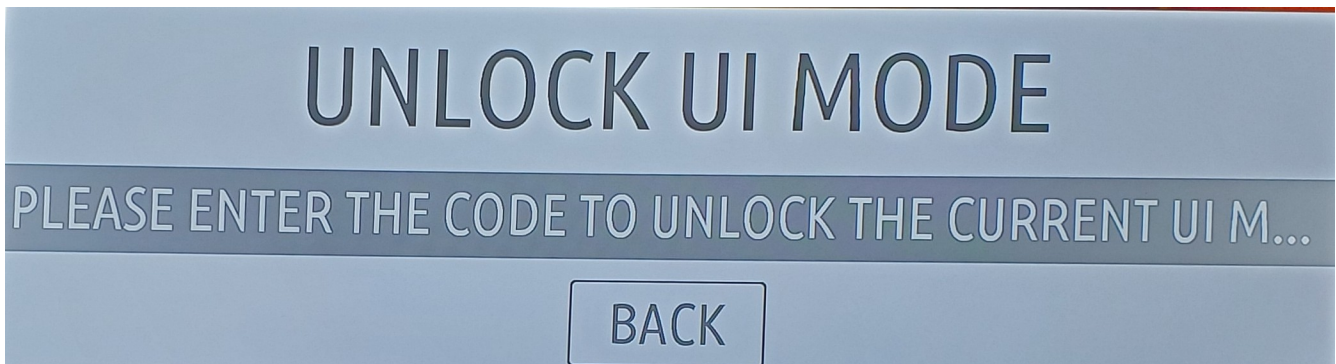

Questions email at Handsomearcade@protonmail.com